SCHEDULE 1 DAILY INSPECTION OF TRUCKS, TRACTORS AND TRAILERS

Part 2. Cab (a) occupant compartment door fails to open. Part 3. Cargo Securement (a) insecure or improper load covering. (a) insecure cargo. (b) absence, failure, malfunction or deterioration of required cargo securement device or load covering. Part 4. Coupling Devices (a) coupler or mounting has loose or missing fastener. (a) coupler or mounting has loose or missing fastener. (b) coupling or locking mechanism is damaged or fails to lock. (c) defective, incorrect or missing safety chain or cable. Part 5. Dangerous Goods - (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function properly. Part 7. Driver Seat (a) seat is damaged or fails to (a) seatbelt or tether belt is insecure, missing or malfunctions. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. Part 9. Emergency Equipment and (a) emergency equipment is missing, damaged or defective. Part 10. Exhaust System (a) ehertical connection. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. Part 12. Fuel System (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General - (a) required mirror ⁶ or window glass falls to provide the required view or to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto	Column 1	Column 2	Column 3
(b) slow air pressure build-up rate. (c) air loss rate exceeds prescribed limit. 7 (c) inoperative towing vehicle (tractor) protection system. (d) low air warning system falls or system is activated. (e) inoperative service, parking or emergency brak (e) inoperative service, parking or emergency brak (e) absence, fallure, malfunction or deterioration or required cargo securement (e) absence, fallure, malfunction or deterioration or required cargo securement device or load covering. Part 3. Cargo Securement (a) insecure or improper load covering absence, fallure, malfunction or deterioration or required cargo securement device or load covering. (b) absence, fallure, malfunction or deterioration or required cargo securement device or load covering. (c) coupling or locking mechanism is damaged or falls to lock. (c) defective, incorrect or missing safety chain or cable. Part 5. Dangerous Goods Part 6. Driver Controls (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fall to function properly. Part 7. Driver Seat (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fall to function properly. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. Part 9. Emergency Equipment and (a) emergency equipment is missing, damaged or defective. Part 10. Exhaust System (a) emergency equipment is missing, damaged or defective. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. Part 12. Fuel System (a) missing fuel tank cap. (b) required mirror or window glass falls to provide the required view of the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror or window glass falls to provide the required view of the driver as a result of being cracked, broken, damaged, missing or missing or missing or darked, broken, damaged, missing or missing or darked, broken, damaged, miss	Systems and Components	Minor Defects	Major Defects
rate. (b) air loss rate exceeds prescribed limit.? (c) incoperative towing vehicle (tractor) protection system. (d) low air warning system fails or system is activated. (e) incoperative service, parking or emergency brak (e) incoperative service, parking or emergency brak (e) insecure cargo. (a) insecure or improper load covering. (b) absence, failure, malfunction or deterioration or required cargo securement device or load covering. (a) coupler or mounting has losse or missing fastener. (b) absence, failure, malfunction or deterioration or required cargo securement device or load covering. (a) coupler or mounting has losse or missing fastener. (b) absence, failure, malfunction or deterioration or required cargo securement device or load covering. (a) coupling Devices (b) absence, failure, malfunction or deterioration or required cargo securement device or load covering. (c) coupling or locking mechanism is damaged or fails to lock. (c) defective, incorrect or missing safety chain or cable. (d) dangerous goods requirements not met. ⁶ Part 6. Driver Controls (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function properly. Part 7. Driver Seat (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function properly. Part 8. Electric Brake System (a) losse or insecure wiring or electricine. (a) seat is damaged or fails to (a) seatbelt or tether belt is insecure, missing or malfunctions. Part 9. Emergency Equipment and (a) emergency equipment is missing, damaged or defective. Part 10. Exhaust System (a) losse or insecure wiring or electrical connection. (b) required mirror or defective. Part 11. Frame and Cargo Body (c) damaged frame or cargo (a) visibly shifted, cracked, collapsing or sagging frame member. (a) insecure fuel tank. (b) dripping fuel leak. (c) dripping fuel leak. (d) insecure fuel tank. (e) dripping fuel leak. (f) required mirror or window glass fails to provide the required view to t	Part 1. Air Brake System	(a) audible air lea	(a) pushrod stroke of any brake exceeds the
(c) inoperative towing vehicle (tractor) protection system. (d) low air warning system falls or system is activated. (e) inoperative service, parking or emergency brak (e) inoperative service, parking or emergency brak (e) any cab or sleeper door falls to close securely. It is insecure or improper load covering. Part 3. Cargo Securement (e) insecure or improper load covering. Part 4. Coupling Devices (a) coupler or mounting has loose or missing fastener. (a) coupler or mounting has loose or missing fastener. (b) absence, fallure, malfunction or deterioration of required dargo securement device or load covering. (a) coupler is insecure or movement exceeds prescribed limit. (b) coupling or locking mechanism is damaged or fails to lock. (c) defective, incorrect or missing safety chain or cable. Part 5. Dangerous Goods - (a) dangerous goods requirements not met. (b) coupling or locking mechanism is damaged or fails to lock. (a) accelerator pedal, clutch, gauges, audible and visual indicators. Part 6. Driver Controls (a) accelerator pedal, clutch, gauges, audible and visual indicators. (a) seat is damaged or fails to remain in set position. Part 7. Driver Seat (a) seat is damaged or fails to remain in set position. Part 8. Electric Brake System (a) seat is damaged or fails to remain in set position. Part 9. Emergency Equipment and (a) emergency equipment is missing, damaged or defective. (b) inoperative breakaway device. (c) inoperative breakaway device. (a) insecure fuel tank. (b) dripping fuel leak. (c) required mirror or window glass fails to provide the required wirror or window glass fails to provide the required wirror or window glass fails to provide the required wirror or glass has broken or damaged attachments onto		(b) slow air press	ure build-up adjustment limit.1
system. (d) low air warning system fails or system is activated. (e) inoperative service, parking or emergency brake fails to open. Part 2. Cab (a) occupant compartment door fails to open. Part 3. Cargo Securement (a) insecure or improper load covering. (b) absence, failure, maffunction or deterioration or required cargo securement device or load covering. Part 4. Coupling Devices (a) coupler or mounting has losse or missing fastener. (b) coupling or locking mechanism is damaged or fails to look. (c) defective, incorrect or missing safety chain or cable. Part 5. Dangerous Goods Part 6. Driver Controls (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function properly. Part 7. Driver Seat (a) seat is damaged or fails to remain in set position. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. (b) inoperative breakaway device. (c) inoperative breakaway device. (a) inoperative breakaway device. (a) inoperative breakaway device. (a) inoperative breakaway device. (b) inoperative breakaway device. (c) inoperative breakaway device. (d) inoperative breakaway device. (e) inoperative breakaway		rate.	(b) air loss rate exceeds prescribed limit. ²
(d) low air warning system fails or system is activated. (e) inoperative service, parking or emergency brak (a) any cab or sleeper door fails to close securely. Part 2. Cab (a) occupant compartment door fails to close securely. Part 3. Cargo Securement (a) insecure or improper load (b) assence, failure, malfunction or deterioration of required cargo securement device or load covering. Part 4. Coupling Devices (a) coupler or mounting has loose or missing fastener. (b) assence, failure, malfunction or deterioration of required cargo securement device or load covering. (a) coupling or locking mechanism is damaged or fails to lock. (c) defective, incorrect or missing safety chain or cable. Part 5. Dangerous Goods Part 6. Driver Controls (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function properly. Part 7. Driver Seat (a) seat is damaged or fails to remain in set position. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. Part 9. Emergency Equipment and (a) emergency equipment is missing, damaged or defective. Part 10. Exhaust System (a) exhaust leak, except as described in Column 3. Part 11. Frame and Cargo Body (a) missing fuel tank cap. (b) dipping the leak. (c) dipping the leak. (d) visibly shifted, cracked, collapsing or sagging frame member. Part 13. General - quired mirror ² or window glass fails to provide the required view to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ² or window glass fails to provide the required view to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ² or glass has broken or damaged attachments onto			(c) inoperative towing vehicle (tractor) protection
Part 2. Cab (a) occupant compartment door (a) any cab or sleeper door fails to close securely. Part 3. Cargo Securement (a) insecure or improper load (b) absence, failure, malfunction or deterioration of required argo securement device or load covering. Part 4. Coupling Devices (a) coupler or mounting has loose or missing fastener. Part 5. Dangerous Goods (c) defective, incorrect or missing safety chain or cable. Part 6. Driver Controls (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function properly. Part 7. Driver Seat (a) seat is damaged or fails to malfunctions. Part 8. Electric Brake System (a) loose or insecure wiring or fails to inchessing described in Column 3. Part 9. Emergency Equipment and (a) emergency equipment is missing, damaged or defective. Part 10. Exhaust System (a) damaged or defective. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. Part 12. Fuel System (a) research (a) missing fuel tank cap. (b) required mirror ⁶ or window glass falls to provide the required view" to the driver as a result of being cracked, broken, damaged, missing or maldiguisted. (b) required mirror ⁶ or window glass falls to provide the required view" to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or window glass falls to provide the required view" to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or window glass falls to provide the required view" to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto			system.
(e) inoperative service, parking or emergency brak Part 2. Cab (a) occupant compartment door fails to open. Part 3. Cargo Securement (a) insecure or improper load covering. (a) insecure or improper load covering. Part 4. Coupling Devices (a) coupler or mounting has loose or missing fastener. (b) coupling or locking mechanism is damaged or fails to lock. (c) defective, incorrect or missing safety chain or cable. Part 5. Dangerous Goods Part 6. Driver Controls (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function properly. Part 7. Driver Seat (a) seat is damaged or fails to termain in set position. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. Part 9. Emergency Equipment and Safety Devices (a) exhaust leak, except as described in Column 3. Part 11. Frame and Cargo Body (a) missing fuel tank cap. (a) insecure tuel tank. (b) dipping fuel leak. (c) defective incorrect or missing safety chain or cable. (a) dangerous goods requirements not met. (b) inoperative breakaway device. (c) inoperative breakaway device. (d) inoperative breakaway device. (e) inoperative compartment. (a) inspective frame member. Part 11. Frame and Cargo Body (a) missing fuel tank cap. (a) insecure tuel tank. (b) dripping fuel leak. (b) dripping fuel leak. (c) defective. (d) required mirror ⁶ or window glass fails to provide the required view' to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto			(d) low air warning system fails or system is
Part 2. Cab (a) occupant compartment door fails to open. Part 3. Cargo Securement (a) insecure or improper load covering. (a) insecure cargo. (b) absence, failure, malfunction or deterioration of required cargo securement device or load covering. Part 4. Coupling Devices (a) coupler or mounting has loose or missing fastener. (a) coupler or mounting has loose or missing fastener. (b) coupling or locking mechanism is damaged or fails to lock. (c) defective, incorrect or missing safety chain or cable. Part 5. Dangerous Goods Part 6. Driver Controls (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fall to function properly. Part 7. Driver Seat (a) seat is damaged or fails to (a) seatbelt or tether belt is insecure, missing or malfunctions. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. (a) inoperative breakaway device. (b) inoperative breakaway device. (c) inoperative breakaway device. (d) inoperative breakaway device. (e) inoperative breakaway device. (f) inoperative breakaway device. (g) available of the total connection. Part 9. Emergency Equipment and (a) emergency equipment is missing, damaged or defective. Part 10. Exhaust System (a) exhaust leak, except as described in Column 3. described in Column 3. (a) leak that causes exhaust gas to enter the occupant compartment. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. Part 12. Fuel System (a) missing fuel tank cap. (b) dripping fuel leak. Part 13. General			activated.
Falls to open. Part 3. Cargo Securement (a) insecure or improper load covering. (a) insecure cargo. (b) absence, failure, malfunction or deterioration of required cargo securement device or load covering. Part 4. Coupling Devices (a) coupler or mounting has loose or missing fastener. (b) acupling is insecure or movement exceeds prescribed limit. (b) coupling or locking mechanism is damaged or fails to lock. (c) defective, incorrect or missing safety chain or cable. Part 6. Driver Controls (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function properly. Part 7. Driver Seat (a) seat is damaged or fails to remain in set position. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. Part 9. Emergency Equipment and Safety Devices (a) emergency equipment is missing, damaged or defective. Part 10. Exhaust System (a) exhaust leak, except as described in Column 3. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. Part 12. Fuel System (a) required mirror ⁶ or window glass fails to provide the required view or to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto			(e) inoperative service, parking or emergency brake.
Part 3. Cargo Securement (a) insecure or improper load covering. (b) absence, failurie, malfunction or deterioration of required cargo securement device or load covering. Part 4. Coupling Devices (a) coupler or mounting has loose or missing fastener. (b) coupling is insecure or movement exceeds prescribed limit.* (b) coupling or locking mechanism is damaged or fails to lock. (c) defective, incorrect or missing safety chain or cable. Part 6. Driver Controls (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function properly. Part 7. Driver Seat (a) seat is damaged or fails to remain in set position. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. (a) emergency equipment is missing, damaged or defective. Part 10. Exhaust System (a) emergency equipment is described in Column 3. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. Part 12. Fuel System (a) required mirror or window glass fails to provide the required view or to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror or glass has broken or damaged attachments onto	Part 2. Cab	(a) occupant com	partment door (a) any cab or sleeper door fails to close securely.
Covering. (b) absence, failure, malfunction or deterioration of required cargo securement device or load covering. ³ (a) coupler or mounting has loose or missing fastener. (a) coupler is insecure or movement exceeds prescribed limit. ⁴ (b) coupling or locking mechanism is damaged or fails to lock. (c) defective, incorrect or missing safety chain or cable. Part 5. Dangerous Goods - (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function properly. Part 7. Driver Seat (a) seat is damaged or fails to malfunctions. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. Part 9. Emergency Equipment and electrical connection. Part 10. Exhaust System (a) emergency equipment is described in Column 3. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. Part 12. Fuel System (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General - (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto		fails to open.	
Part 4. Coupling Devices (a) coupler or mounting has loose or missing fastener. (a) coupler or mounting has loose or missing fastener. (b) coupling or locking mechanism is damaged or fails to look. (c) defective, incorrect or missing safety chain or cable. Part 5. Dangerous Goods Part 6. Driver Controls (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fall to function property. Part 7. Driver Seat (a) seat is damaged or fails to remain in set position. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. Part 9. Emergency Equipment and Safety Devices Part 10. Exhaust System (a) ewhaust leak, except as described in Column 3. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. Part 12. Fuel System (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General (a) required mirror ⁶ or window glass falls to provide the required view to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto	Part 3. Cargo Securement	(a) insecure or im	proper load (a) insecure cargo.
Part 4. Coupling Devices (a) coupler or mounting has loose or missing fastener. (a) coupler or mounting has loose or missing fastener. (b) coupling or locking mechanism is damaged or fails to lock. (c) defective, incorrect or missing safety chain or cable. Part 5. Dangerous Goods Part 6. Driver Controls (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function property. Part 7. Driver Seat (a) seat is damaged or fails to remain in set position. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. Part 9. Emergency Equipment and Safety Devices Part 10. Exhaust System (a) emergency equipment is missing, damaged or defective. Part 11. Frame and Cargo Body (a) admaged frame or cargo body. Part 12. Fuel System (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General - (a) required mirror or window glass fails to provide the required view or to driver as a result of being cracked, broken, damaged attachments onto		covering.	(b) absence, failure, malfunction or deterioration of
loose or missing fastener. prescribed limit.* (b) coupling or locking mechanism is damaged or fails to lock. (c) defective, incorrect or missing safety chain or cable. Part 5. Dangerous Goods - (a) dangerous goods requirements not met. 5			required cargo securement device or load covering. ³
loose or missing fastener. prescribed limit.* (b) coupling or locking mechanism is damaged or fails to lock. (c) defective, incorrect or missing safety chain or cable. Part 5. Dangerous Goods - (a) dangerous goods requirements not met. 5	Part 4. Coupling Devices	(a) coupler or mo	
(a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function property. Part 6. Driver Controls (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function property. Part 7. Driver Seat (a) seat is damaged or fails to mellunctions. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. Part 9. Emergency Equipment and Safety Devices Part 10. Exhaust System (a) exhaust leak, except as described in Column 3. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. Part 12. Fuel System (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto			
fails to lock. (c) defective, incorrect or missing safety chain or cable. Part 5. Dangerous Goods - (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function properly. Part 7. Driver Seat (a) seat is damaged or fails to remain in set position. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. Part 9. Emergency Equipment and Safety Devices Part 10. Exhaust System (a) emergency equipment is missing, damaged or defective. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. Part 12. Fuel System (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General - (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto			
Part 5. Dangerous Goods - (a) dangerous goods requirements not met. - (a) seat is damaged or fails to remain in set position. - (b) dinoperative breakaway device. - (c) inoperative breakaway device (d) inoperative breakaway device (e) inoperative breakaway device (e) inoperative breakaway device (f) inoperative breakaway device (g) inoperative breakaway device (a) inoperativ			
Part 5. Dangerous Goods - (a) dangerous goods requirements not met. - (a) seat is damaged or fails to remain in set position. - (b) dinoperative breakaway device. - (c) inoperative breakaway device (d) inoperative breakaway device (e) inoperative breakaway device (e) inoperative breakaway device (f) inoperative breakaway device (g) inoperative breakaway device (a) inoperativ			(c) defective, incorrect or missing safety chain or
Part 5. Dangerous Goods - (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function properly. Part 7. Driver Seat (a) seat is damaged or fails to remain in set position. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. Part 9. Emergency Equipment and (a) emergency equipment is missing, damaged or defective. Part 10. Exhaust System (a) exhaust leak, except as described in Column 3. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. Part 12. Fuel System (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General - (a) required mirror ⁶ or window glass fails to provide the required view' to the driver as a result of being cracked, broken, damaged attachments onto			
Part 6. Driver Controls (a) accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function properly. Part 7. Driver Seat (a) seat is damaged or fails to remain in set position. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. Part 9. Emergency Equipment and (a) emergency equipment is missing, damaged or defective. Part 10. Exhaust System (a) exhaust leak, except as described in Column 3. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. Part 12. Fuel System (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged attachments onto	Part 5. Dangerous Goods	-	
gauges, audible and visual indicators or instruments fail to function properly. Part 7. Driver Seat (a) seat is damaged or fails to remain in set position. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. Part 9. Emergency Equipment and Safety Devices Part 10. Exhaust System (a) emergency equipment is missing, damaged or defective. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. Part 12. Fuel System (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged attachments onto		(a) accelerator ne	
Part 7. Driver Seat (a) seat is damaged or fails to remain in set position. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. Part 9. Emergency Equipment and Safety Devices Part 10. Exhaust System (a) exhaust leak, except as described in Column 3. Part 11. Frame and Cargo Body (a) missing fuel tank cap. (a) insecure wiring or electrical connection. (b) inoperative breakaway device. (b) inoperative brake. - (a) leak that causes exhaust gas to enter the occupant compartment. (a) exhaust leak, except as described in Column 3. (b) damaged frame or cargo body. (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General - (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged attachments onto	art of Briver Controls		
Part 7. Driver Seat (a) seat is damaged or fails to remain in set position. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. (b) inoperative breakaway device. (b) inoperative brake. Part 9. Emergency Equipment and Safety Devices Part 10. Exhaust System (a) exhaust leak, except as described in Column 3. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. Part 12. Fuel System (a) missing fuel tank cap. (a) insecure wiring or inoperative breakaway device. (b) inoperative brake. (a) leak that causes exhaust gas to enter the occupant compartment. (a) visibly shifted, cracked, collapsing or sagging frame member. Part 12. Fuel System (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General (a) serious damage or deterioration that is noticeable and may affect the vehicle's safe operation. Part 14. Glass and Mirrors (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto		1 -	
remain in set position. Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. (b) inoperative breakaway device. (b) inoperative brake. Part 9. Emergency Equipment and Safety Devices Part 10. Exhaust System (a) exhaust leak, except as described in Column 3. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. Part 12. Fuel System (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General Part 14. Glass and Mirrors (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto	Part 7 Driver Seat		
Part 8. Electric Brake System (a) loose or insecure wiring or electrical connection. (b) inoperative breakaway device. (c) inoperative brake. Part 9. Emergency Equipment and Safety Devices Part 9. Emergency Equipment and (a) emergency equipment is missing, damaged or defective. Part 10. Exhaust System (a) exhaust leak, except as described in Column 3. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. (a) damaged frame or cargo frame member. Part 12. Fuel System (a) missing fuel tank cap. (a) inoperative breakaway device. (b) inoperative brake. (a) leak that causes exhaust gas to enter the occupant compartment. (a) visibly shifted, cracked, collapsing or sagging frame member. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General - (a) serious damage or deterioration that is noticeable and may affect the vehicle's safe operation. Part 14. Glass and Mirrors (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto	ait 7. Driver Seat		
electrical connection. (b) inoperative brake. Part 9. Emergency Equipment and Safety Devices (a) emergency equipment is missing, damaged or defective. Part 10. Exhaust System (a) exhaust leak, except as described in Column 3. (a) leak that causes exhaust gas to enter the occupant compartment. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. (a) visibly shifted, cracked, collapsing or sagging frame member. Part 12. Fuel System (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General - (a) serious damage or deterioration that is noticeable and may affect the vehicle's safe operation. Part 14. Glass and Mirrors (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto	Part 9 Floatria Praka System		
Part 9. Emergency Equipment and Safety Devices missing, damaged or defective. Part 10. Exhaust System (a) exhaust leak, except as described in Column 3. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. Part 12. Fuel System (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General - (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto	Part 6. Electric Brake System	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	
Safety Devices missing, damaged or defective. Part 10. Exhaust System (a) exhaust leak, except as described in Column 3. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. (a) visibly shifted, cracked, collapsing or sagging frame member. Part 12. Fuel System (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General - (a) serious damage or deterioration that is noticeable and may affect the vehicle's safe operation. Part 14. Glass and Mirrors (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto	Dort O. Emergency Equipment and		
Part 10. Exhaust System (a) exhaust leak, except as described in Column 3. (a) leak that causes exhaust gas to enter the occupant compartment. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. (a) visibly shifted, cracked, collapsing or sagging frame member. Part 12. Fuel System (a) missing fuel tank cap. (b) dripping fuel leak. Part 13. General			
described in Column 3. Part 11. Frame and Cargo Body (a) damaged frame or cargo body. Part 12. Fuel System (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General - (a) serious damage or deterioration that is noticeable and may affect the vehicle's safe operation. Part 14. Glass and Mirrors (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto	•	<u> </u>	
Part 11. Frame and Cargo Body (a) damaged frame or cargo body. (a) visibly shifted, cracked, collapsing or sagging frame member. Part 12. Fuel System (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General - (a) serious damage or deterioration that is noticeable and may affect the vehicle's safe operation. Part 14. Glass and Mirrors (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto	Part 10. Exnaust System		
body. Part 12. Fuel System (a) missing fuel tank cap. (b) dripping fuel leak. Part 13. General - (a) insecure fuel tank. (b) dripping fuel leak. Part 14. Glass and Mirrors (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto	Port 44. France and Ocean Ports		
Part 12. Fuel System (a) missing fuel tank cap. (a) insecure fuel tank. (b) dripping fuel leak. Part 13. General - (a) serious damage or deterioration that is noticeable and may affect the vehicle's safe operation. Part 14. Glass and Mirrors (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto	Part 11. Frame and Cargo Body	, ,	
Part 13. General - (a) serious damage or deterioration that is noticeable and may affect the vehicle's safe operation. Part 14. Glass and Mirrors (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto		,	
Part 13. General - (a) serious damage or deterioration that is noticeable and may affect the vehicle's safe operation. Part 14. Glass and Mirrors (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto	Part 12. Fuel System	(a) missing fuel to	
Part 14. Glass and Mirrors (a) required mirror ⁶ or window glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto			
Part 14. Glass and Mirrors (a) required mirror ⁶ or window - glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto	Part 13. General	-	
glass fails to provide the required view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto			
view ⁷ to the driver as a result of being cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto	Part 14. Glass and Mirrors	(a) required mirro	⁶ or window -
cracked, broken, damaged, missing or maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto			·
maladjusted. (b) required mirror ⁶ or glass has broken or damaged attachments onto			
(b) required mirror ⁶ or glass has broken or damaged attachments onto		cracked, broken, damag	ed, missing or
broken or damaged attachments onto		-	
		(b) required mirro	⁻⁶ or glass has
		broken or damaged atta	chments onto
vehicle body.		vehicle body.	

Part 15. Heater / Defroster	(a) control or system failure.	(a) defroster fails to provide unobstructed view
		through the windshield.
Part 16. Horn	(a) vehicle has no operative	-
	horn.	
Part 17. Hydraulic Brake System	(a) brake fluid level is below	(a) brake boost or power assist is not operative.
	indicated minimum level.	(b) brake fluid leak.
		(c) brake pedal fade or insufficient brake pedal
		reserve.
		(d) activated (other than ABS) warning device.
		(e) brake fluid reservoir is less than ¼ full.
		(f) parking brake is inoperative.
Part 18. Lamps and Reflectors	(a) required lamp does not	When use of lamps is required:
	function as intended.8	(a) failure of both low-beam headlamps.
	(b) required reflector is missing	(b) failure of both rearmost tail lamps.
	or partially missing.9	At all times:
		(a) failure of a rearmost turn-indicator lamp.
		(b) failure of both rearmost brake lamps.
Part 19. Steering	(a) steering wheel lash (free-	(a) steering wheel is insecure, or does not respond
Train discining	play) is greater than normal.	normally.
	production in the second secon	(b) steering wheel lash (free-play) exceeds
		prescribed limit. ¹⁰
Part 20. Suspension System	(a) air leak in air suspension	(a) damaged (patched, cut, bruised, cracked to braid
Tart 20. Gasperision Gystom	system.	or deflated) air bag or insecurely mounted air bag.
	(b) a broken spring leaf.	(b) cracked or broken main spring leaf or more than
	(c) suspension fastener is	one broken spring leaf in any spring assembly.
	loose, missing or broken.	(c) part of spring leaf or suspension is missing,
	loose, missing or broken.	shifted out of place or is in contact with another vehicle
		component.
		(d) loose U-bolt.
Part 21. Tires	(a) damaged tread or sidewall	(a) flat tire.
Tart 21. Tiles	of tire.	(a.1) tire leaking, if leak can be felt or heard.
	(b) tire leaking, if leak cannot be	
	heard.	,
	neard.	(c) tire is in contact with another tire or any vehicle component other than mud-flap.
		'
		(d) tire is marked "Not for highway use".
		(e) tire has exposed cords in the tread or outer
Dest 22 Wheels Highs and Factories		sidewall area.
Part 22. Wheels, Hubs and Fasteners	(a) hub oil below minimum level	(a) wheel has loose, missing or ineffective fastener.
	(when fitted with sight glass).	(b) damaged, cracked or broken wheel, rim or
	(b) leaking wheel seal.	attaching part.
		(c) evidence of imminent wheel, hub or bearing failure.
Part 23. Windshield Wiper / Washer	(a) control or system	When use of wipers or washer is required:
	malfunction.	(a) wiper or washer fails to adequately clear driver's
	(b) wiper blade is damaged,	field of vision in area swept by driver's side wiper.
	missing or fails to adequately clear	and a side mpon
	driver's field of vision.	